


ABRAXIS® Microcystins Strip Test Finished Drinking Water 520016/520017

1. Collect Sample




Collect 1 to 2 ml of sample.

2. Transfer

Squeeze the upper bulb to draw sample into the pipette.

The required amount of sample will fill the stem of the pipette. Any excess with flow into the overflow bulb.

Squeeze the upper bulb again to dispense the required amount of sample into the conical tube.

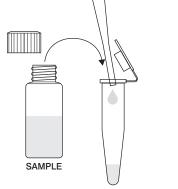

3. Shake and incubate



Close the conical, flip-top tube and shake for 30 seconds.



Incubate for 20 minutes.



(Dried reagents will dissolve, turning the sample purple.)

4. Test

Insert test strip into conical, flip-top tube with arrow pointing down.

Incubate for 10 minutes.




5. Dry

Remove test strip. Lay flat and allow to continue developing for 5 minutes.



6. Interpret

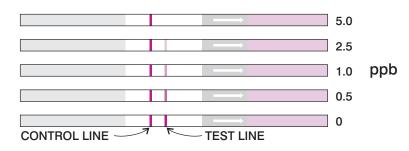

INTERPRET TEST

CONTROL LINE	TEST LINE	INTERPRETATION
NO CONTROL LINE PRESENT	NO TEST LINE PRESENT	INVALID RESULT
CONTROL LINE PRESENT	NO TEST LINE PRESENT	>5 ppb
CONTROL LINE PRESENT	MODERATE INTENSITY TEST LINE PRESENT	BETWEEN 0 AND 5 ppb

Gold Standard Diagnostics 795 Horsham Road Horsham, PA 19044 WEB: www.abraxiskits.com T (215) 357 3911 F (215) 357 5232

Ordering: info.abraxis@us.goldstandarddiagnostics.com Technical Support: support.abraxis@us.goldstandarddiagnostics.com

Version: 0

Date this Flow Chart is effective: 05/17/2024