


ABRAXIS® Trifluralin ELISA Plate 500601


1. Addition of Standards, Samples

Add 50 uL of the standard solutions or samples into the wells of the test strips according to the working scheme given. We recommend using duplicates or triplicates.

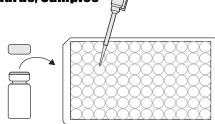


2. Addition of Antibody Solution

Add 50 uL of the
Trifluralin antibody solution
to the individual wells
successively using a multichannel pipette. Cover
the wells with parafilm or
tape and mix the contents
by moving the strip holder
in a rapid circular motion
on the benchtop. Be
careful not to spill
contents. Incubate the
strips for 30 minutes at
room temperature.

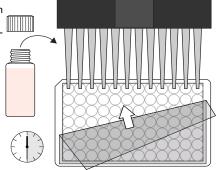


3. Addition of Enyzme Conjugate

Add 50 uL of the enzyme conjugate to the individual wells successively using a multi- channel pipette or a stepping pipette. Cover the wells with parafilm or tape and mix the contents by moving the strip holder in a rapid circular motion on the benchtop. Be careful not to spill contents. Incubate the strips for 30 minutes at room temperature.

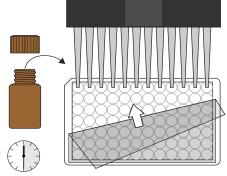


5. Addition of Substrate/Color Solution

Add 150 uL of substrate/color solution to the individual wells successively using a multichannel pipette or a stepping pipette. Cover the wells with parafilm or tape and mix the contents by moving the strip holder in a rapid circular motion on the benchtop. Be careful not to spill contents. Incubate the strips for 20 minutes at room temperature.

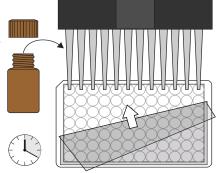


6. Addition of Stopping Solution

Add 100 uL of stop solution to the wells in the same sequence as for the substrate solution using a multi- channel pipette or a stepping pipette.

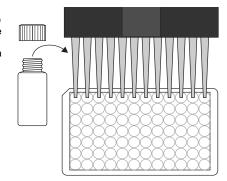


7. Measurement of Color

Read the absorbance at 450 nm using a microplate ELISA reader. Calculate results.

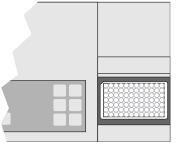

4. Washing of Plates

After incubation, remove the covering and vigorously shake the contents of the wells into a sink. Wash the strips three times with a multi-channel pipette or wash bottle using the diluted 1X washing buffer solution. Please use at least a volume of 250 uL of washing buffer for each well and each washing step. Remaining buffer in the wells should be removed by patting the plate dry on a stack of paper towels.

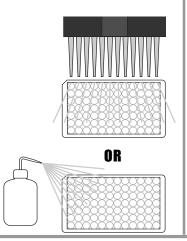

Gold Standard Diagnostics 795 Horsham Road Horsham, PA 19044 WEB: www.abraxiskits.com T (215) 357 3911 F (215) 357 5232

Ordering: info.abraxis@us.goldstandarddiagnostics.com Technical Support: support.abraxis@us.goldstandarddiagnostics.com

Date this Flow Chart is effective: 05/17/2024

Version: 01